

SIEMENS

Operating Instructions

optiPoint 500 entry

Hicom 150 E and H, HiPath 3000, HiPath AllServe

Before You Begin

These operating instructions describe the optiPoint 500 Entry telephone on your HiPath 3000/HiPath AllServe.

They describe all functions you can use from your telephone. You may find that some functions you wish to use are not available on your telephone. This may be due to one of the following reasons:

- The function has not been configured for your telephone - address any questions to Customer Support.
- Your communications platforms does not support this function - contact your Siemens sales representative to upgrade your system.

How to Use these Operating Instructions

Step by Step

You will find a graphic representation of the steps in logical sequence in the left column. Below is an explanation of the symbols:



Lift the handset (off-hook).



Replace the handset (on-hook).



Conduct a call.



Enter a telephone number or code.



Enter the PIN.



Press volume controls on the telephone.



You hear a tone.

A long tone (positive confirmation tone) confirms that you have successfully activated a function or procedure. A short tone (negative confirmation tone) indicates that the function or procedure was rejected.



Press the key.



 
Press the illuminated key.



Press the flashing key.

The optiPoint 500 Entry Telephone

The following figure shows the top view of an optiPoint 500 Entry phone without the handset. Note that special features are marked, but common features like the keypad are not marked.

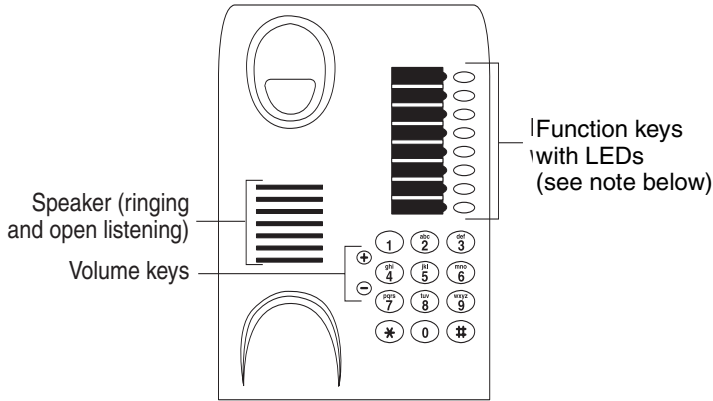

op000015

The Default Settings of the Function Keys




The default settings of the function keys are:

- Consultation
- Redial
- Message Waiting
- Callback
- Speed Dial
- Mute
- Speaker
- Release



Your service technician can customize the default assignment to meet your preferences and requirements following order placement.

Important Notes

| | |
|---|---|
|  | Do not operate the telephone in environments where there is a danger of explosions. |
|  | Use only original Siemens accessories → page 59. Using other accessories may cause a hazard and will invalidate the warranty and the CE mark. |
|  | Never open the telephone or a key module. If you encounter any problems, contact System Support. |
| Never allow the telephone to come into contact with staining or aggressive liquids such as coffee, tea, juice, or soft drinks. For information on telephone maintenance → page 60. | |

CE mark



The device conforms to the EU guideline 1999/5/EG, as attested by the CE mark.

Environmental label



This device has been manufactured in accordance with our certified environmental management system (ISO 14001). This process ensures that energy consumption and the use of primary raw materials are kept to a minimum, thus reducing waste production.

Step by Step

Accessing Functions

... With Codes

You can activate the functions of your system **by entering codes** such as:

* 9 7

DND (do not disturb) on.

9 7

DND (do not disturb) off.

All codes to activate or enable functions are always introduced by pressing the star key, and all codes to deactivate, disable or delete functions are always entered starting with the pound key.

The codes may contain up to three digits.

An alphabetically ordered overview of all functions and their corresponding codes can be found in the **Appendix** (Quick-Reference Operating Instructions).



If your service technician has changed the default assignments and saved functions on keys in accordance with your requests or requirements, you can execute these functions by pressing the appropriate keys.

... With Function Keys

Functions for which a key has been set up can be accessed directly as follows.



Press the “consultation hold” key. The function is executed, provided this is possible in the current situation.

| | |
|---|----------|
| Before You Begin | 2 |
| How to Use these Operating Instructions | 2 |
| The optiPoint 500 Entry Telephone | 3 |
| The Default Settings of the Function Keys | 3 |
| Important Notes | 4 |
| CE mark | 4 |
| Environmental label | 4 |
| Accessing Functions | 5 |
| ... With Codes | 5 |
| ... With Function Keys | 5 |



Basic and Enhanced Functions

| | |
|--|-----------|
| Making and Answering Calls | 11 |
| Answering a Call | 11 |
| Open Listening in the Room During a Call | 11 |
| Using Call Waiting | 12 |
| Accepting a Specific Call for Your Colleague | 13 |
| Rejecting Calls | 13 |
| Using Mailboxes | 14 |
| Using Timed Reminders | 14 |
| Using the Speakerphone | 14 |
| Turning Do Not Disturb On and Off | 15 |
| Trace Call: Identifying Anonymous Callers (Not for U.S.) | 15 |
| Turning the Microphone On and Off | 15 |
| Answering Calls from the Entrance Telephone and Opening the Door | 16 |
| Making Calls | 18 |
| Dialing Numbers | 18 |
| On-Hook Dialing | 18 |
| Caller ID Suppression | 19 |
| Talking to Your Colleague With a Speaker Call | 19 |
| Activating Tone Dialing (DTMF Suffix Dialing) | 19 |
| Automatic Connection Setup (Hotline) | 20 |
| Reserve Trunk | 20 |
| Assigning a Station Number (Not for U.S.) | 21 |
| Trunk Flash | 21 |
| Associated Dialing/Dialing Aid | 21 |

| | |
|---|-----------|
| Calling Multiple Parties Simultaneously. | 22 |
| Calling a Second Party (Consultation Hold) | 22 |
| Conducting a Conference | 23 |
| Transferring a Call | 24 |
| Parking a Call | 25 |
| Picking up (Retrieving) a Held Call | 25 |
| | |
| Making Calls to Stored Destinations | 26 |
| Redialing a Number | 26 |
| Using Station and System Speed-Dial Numbers | 26 |
| | |
| Displaying and Assigning Call Charges | 27 |
| Dialing with Call Charge Assignment | 27 |
| | |
| If You Cannot Reach a Destination... | 28 |
| Using Callback | 28 |
| Call Waiting (Camp-On) | 29 |
| Busy Override - Joining a Call in Progress | 29 |
| | |
| Telephone Settings | 30 |
| Adjusting the Ring Volume | 30 |
| Adjusting the Ring Tone | 30 |
| Adjusting the Receiving Volume During a Call | 30 |
| Locking the Telephone to Prevent Unauthorized Use | 31 |
| Saving Your PIN | 32 |
| | |
| Saving Station Numbers and Appointments | 33 |
| Storing Station Speed-Dial Numbers | 33 |
| Saving Appointments | 33 |
| | |
| Testing the Telephone | 34 |
| Testing the Telephone Functions | 34 |
| | |
| Call Forwarding | 35 |
| Using Variable Call Forwarding | 35 |
| Using Night Answer | 36 |
| Call Forwarding in the Carrier Network and Forwarding Multiple Subscriber Numbers (MSN) (Not for U.S.) . . . | 37 |

| | |
|--|-----------|
| Using Other Functions | 38 |
| Sending a Message | 38 |
| Using Another Telephone Like Your Own | 39 |
| Moving Your Telephone (Relocate Procedure) | 39 |
| Resetting Services and Functions (System-Wide Cancellation for a Telephone) | 40 |
| Silent Monitor | 41 |
| Monitoring a Room | 41 |
| Activating Functions for Another Telephone | 42 |
| Locking Another Telephone to Prevent Unauthorized Use | 43 |
| Using System Functions from the Outside (DISA: Direct Inward System Access) | 43 |
| Controlling Connected Computers or Other Programs and Telephone Data Service (For HiPath 3500/3550/3700/3750 only) | 45 |
| Controlling Relays | 46 |
| Radio Paging (Not for U.S.) | 46 |

 **Team and Executive/Secretary Functions**

**Team and Executive/Secretary Functions With
Assigned Trunk Lines** **48**

| | |
|--|----|
| Forwarding Calls on Lines | 48 |
| Transferring Calls Directly to the Executive (Only in an Executive/Secretary Group) | 49 |

Using Other Team Functions **50**

| | |
|--|----|
| Turning Group Call On and Off | 50 |
| Accepting a Call for Another Member of Your Team | 51 |
| Activating and Deactivating a Ringing Group | 51 |
| Uniform Call Distribution (UCD) | 52 |

 **System networking via LAN (PC network)**

Special Functions in the LAN (PC Network) **53**

| | |
|---|----|
| Leaving a Hunt Group/Group Call | 53 |
| Transferring Call Forwarding | 54 |
| Using Night Answer | 55 |
| Activating and Deactivating a Ringing Group | 56 |
| Controlling Relays | 57 |

 
| | |
|------------------------|----|
| Opening the Door | 58 |
|------------------------|----|

 **All About Your Telephone**

| | |
|--|-----------|
| Documentation..... | 59 |
| Ordering Operating Instructions (Not for U.S.) | 59 |
| Accessories | 59 |
| Fixing Problems..... | 60 |
| Telephone Maintenance | 60 |
| Troubleshooting..... | 60 |
| Index | 61 |

 **Appendixes**

| | |
|--|-----------|
| Alphabetical Overview of Functions and Codes .. | 65 |
| FCC and Industry Canada Compliance..... | 69 |
| FCC Certification and Requirements | 69 |
| Equipment Attachment Limitations..... | 71 |



Step by Step

Making and Answering Calls

Special default ring signaling is set for your telephone:

- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.

Answering a Call

The telephone rings.

Lift the handset.



To raise or lower the volume, keep pressing the keys until the desired volume is set.

Ending the call:

Replace the handset.



Press the key.

Open Listening in the Room During a Call

You can let other people in the room join in on the call. Let the other party know that you have turned on the speaker.

Precondition: You are conducting a call with the handset.

Activating this function:



Press the key. The LED lights up.

Deactivating this function:



Press the key. The LED goes out.

Step by Step

Using Call Waiting

Callers can still reach you while you are engaged in another call. A signal alerts you to the waiting call.

You can either ignore or accept the waiting call.

When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on.

You can also bar call waiting or the call waiting tone
→ page 12.

Accepting a Waiting Call (Camp-On)

Precondition: You are engaged in a phone call and hear a tone (every six seconds).

Ending the first call and answering the waiting call:



Replace the handset. Your telephone rings.

Answer the second call. Lift the handset.

 
Placing the first call on hold and answering the second call:



Press the key. LED flashes. Enter the code.

You are connected to the call waiting party immediately. The first party is placed on hold.

Ending the second call and resuming the first one:



Press this key and wait two seconds.

or



Press the key twice.

Preventing and Allowing Call Waiting (Automatic Camp-On)

If this function has been configured (ask your service technician), you can prevent or allow a second call
→ page 12 from being signaled by automatic camp-on during an ongoing call.

Step by Step

Lift the handset.

Enter the code to "prevent" or "allow" call waiting.

Turning the Call Waiting Tone On and Off

You can suppress the call waiting tone every six seconds for external calls. A one-time special dial tone then alerts you to the waiting call.

Lift the handset.

Enter code for "tone off" or "tone on".

Accepting a Specific Call for Your Colleague


You hear another telephone ring.

Lift the handset.

Enter the code.

Enter the number of the telephone that is ringing.

 [Accepting calls in a team → page 51.](#)

Rejecting Calls

You can reject calls which you do not wish to take. The call is then signaled at another definable telephone (contact System Support).

The telephone rings.



Press the key.

If a call cannot be rejected, your telephone will continue to ring.

Step by Step



Message Waiting 

Using Mailboxes

If there are messages waiting for you, you will hear a special dial tone (continuous buzzing) when you lift the handset.

Lift the handset.

Enter the code.

Press the illuminated key.


This connects you to the sender of the message or the mailbox system.

Using Timed Reminders

Precondition: You must have saved a timed reminder → page 33. The current time is the time stored.

Your telephone rings.

Lift the handset and replace it again.


 If you fail to answer the timed reminder, it repeats five times and is then erased.

Using the Speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement.

 
You can respond with the handset or in speakerphone mode.

Lift the handset and answer the call.

 Placing a speaker call to a colleague → page 19.



Step by Step



Turning Do Not Disturb On and Off

You can activate the do not disturb function if you do not want the receive any calls. When do not disturb is activated, internal callers hear a busy signal and external callers are rerouted to a telephone assigned for this purpose (System Support).

Lift the handset.

Enter the code for "on" or "off".



When you lift the handset, a special dial tone (continuous buzzing) reminds you that "do not disturb" is active.

Authorized internal callers can automatically override the "do not disturb" function after five seconds.



Trace Call: Identifying Anonymous Callers (Not for U.S.)

You can have the carrier identify malicious external callers. You can save the caller's station number during the call or for 30 seconds after the call ends. However, it is essential that you do not replace your handset during this time.

You are engaged in an external call.

Press the key. LED flashes. Enter the code.



After you have finished tracing the call, the data is stored on the carrier's system. Now contact System Support.

Turning the Microphone On and Off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone.

Precondition: You are conducting a call. The microphone is switched on.



Press the key. The LED lights up.

Step by Step

Mute

Turning off the mute:

Press the illuminated key. The LED goes out.

Answering Calls from the Entrance Telephone and Opening the Door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener. If you are authorized to activate a **door opener** (contact System Support), visitors can open the door themselves by entering a 5-digit code (e.g. using a DTMF transmitter or installed keypad).

Speaking to visitors via the entrance telephone:

Precondition: Your telephone rings.



Lift the handset within thirty seconds. You are connected to the entrance telephone immediately.

or



Lift the handset after more than thirty seconds.



Dial the entrance telephone number.

Opening the door from your telephone during a call from the entrance telephone:

Consultation



6

1



Press the key. LED flashes. Enter the code.

Dial the entrance telephone number.



Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 58!

Opening the door with a code (at the door):



After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a doorbell call signal may or may not be forwarded.

Step by Step

Activating the door opener:



Lift the handset.



Enter the code.



Dial the entrance telephone number.



Enter the five-digit code. Default code = "00000" (contact System Support).



Enter the type of door opener. 1 = enable with ring, 2 = enable w/o ring = You can also open the door without a doorbell ring.

Deactivating the door opener:



Lift the handset.



Enter the code.



Dial the entrance telephone number.

Step by Step

Making Calls



Dialing Numbers



 
Lift the handset.

Internal calls: Enter the station number.
External calls: Enter the external code and the station number.

The called party does not answer or is busy:



Replace the handset.



Press the key.

On-Hook Dialing



Internal calls: Enter the station number.
External calls: Enter the external code and the station number.

The other party answers with speaker:



Lift the handset.

The called party does not answer or is busy:



Press the key. The LED goes out.



 
Press the key.

Step by Step

Caller ID Suppression

You can prevent your station number or name from appearing on the displays of external parties you call. The feature remains active until you deactivate it.

Lift the handset.



Enter code for "suppress" or "restore".



System Support can turn caller ID suppression on and off for all telephones.

Talking to Your Colleague With a Speaker Call

You can make a loudspeaker announcement through a loudspeaker if connected (ask System Support), or to an internal user with an optiPoint 500 system telephone without any action on their part.

Lift the handset.



 
Enter the code.

Enter the station number.

Activating Tone Dialing (DTMF Suffix Dialing)

You can transmit dual-tone multifrequency (**DTMF**) signals to control devices such as an answering machine or automatic information system.

You have set up a connection.

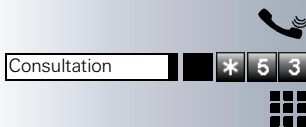

Press the key. LED flashes. Enter the code.

You can use the keys "0" through "9", "*", and "#" to transmit DTMF signals.



Ending the call also deactivates DTMF suffix dialing.

Your system may be configured so that you can start DTMF suffix-dialing immediately after setting up a connection.

Step by Step

Automatic Connection Setup (Hotline)

If this function is configured (contact System Support), the system automatically sets up a connection to a pre-set internal or external destination.



Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a preset **period of time (hotline after a timeout)**.

Reserve Trunk

If this feature is configured (contact System Support), you can reserve a busy trunk for your own use. When the trunk is free, you receive a call.



Lift the handset.



Enter the external code. The external trunk is busy; you hear a busy signal tone. Wait about 5 seconds until the busy tone ends.

The trunk is reserved.



Replace the handset.

When the reserved trunk becomes free:

Your telephone rings.



Lift the handset. You hear the CO dial tone.



Enter the number of the external station.

Step by Step

Assigning a Station Number (Not for U.S.)

If this function has been configured (contact System Support), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.



Lift the handset.

Enter the code.

Enter the DID number you wish to use.

Dial the external number.

Trunk Flash

To activate ISDN-type services and features through the network carrier's analog trunks or those of other communications platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

Precondition: You have set up an external connection via an analog line.

Consultation



Press the key. LED flashes. Enter the code.

Enter the service code and/or telephone number.

Associated Dialing/Dialing Aid

If this function has been configured (contact System Support), you can use your telephone as a dialing aid for other telephones.



Lift the handset.

Enter the code.

Enter the internal station number of the party for whom you want to dial.

Enter the number you wish to dial (external number with external code).

Step by Step

Calling Multiple Parties Simultaneously



Calling a Second Party (Consultation Hold)

 
You can call a second party while engaged in a call. The first party is placed on hold.



Press the key. LED flashes.

Call the second station.


Return to the first party:



Press this key and wait two seconds.

(depending on the configuration)

 or



Press the key twice.

Switching to the Party on Hold (Toggle)



Press the key. Enter the code. LED continues to flash.

Combining the calling parties into a three-party conference



Press the key. Enter the code. The LED goes out.

Connecting the other parties to each other



Replace the handset.

Step by Step

Conducting a Conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.



Lift the handset.



Call the first party.



Press the key. LED flashes.



Call the second station. Announce the conference.



Press the key. Enter the code. The LED goes out.

 
A tone sounds every 30 seconds to indicate that a conference is in progress. Contact System Support for instructions on how to turn it off.

If the second party does not answer:




Press this key and wait two seconds.
(depending on the configuration)

or



Press the key twice.

 
Adding Up to Five to the Conference (Initiator Only)



Press the key. LED flashes.



 Call the new party. Announce the conference.



Press the key. Enter the code. The LED goes out, etc.

Leaving a Conference



Replace the handset.

Ending a Conference (Initiator Only)



Press the key. LED flashes. Enter the code.

Removing the ISDN Central Office Party From the Conference (Only for U.S.)



Press the key. LED flashes.



Enter the code.

Step by Step

Consultation



Transferring a Call

If the person you are speaking to wants to talk to another colleague of yours, you can transfer the call that colleague.

Press the key. LED flashes.

Enter the number of the party to which you want to transfer the call.

Announce the call, if necessary.

Replace the handset.

...After a Speaker Call (Announcement) in a Group

If this function has been configured (contact System Support), you can use a speaker call (announcement, → page 19) to announce a call in progress to a group of users → page 50.

After a member of the group has accepted the call request, you can transfer the waiting party.

Precondition: You are conducting a call.

Consultation



Press the key. LED flashes. Enter the code.

Enter the group's station number.

Announce the call.

When a member of the group accepts the call, you are connected to this party.

Replace the handset.



If the connection between the two other parties is not established within 45 seconds, the call from the first party returns to you (recall).

Step by Step

Consultation    

 ...  



 ... 





Parking a Call

You can park up to ten calls, either internal, external, or both. Parked calls can be displayed on and picked up from another telephone. This feature is useful if you want to continue a call at another phone.

Precondition: You are conducting a call.

Press the key. LED flashes. Enter the code.

Enter the number of the park slot (0-9) and make a note of it.

If the park slot number you entered is already being used, you will hear the negative confirmation tone. Please enter another number.

Replace the handset.

Retrieving a Parked Call


Precondition: One or more calls have been parked. The telephone is idle.

Lift the handset.

Enter the code.

Enter the park slot number you noted earlier.

If the park slot number you enter is not in use, you cannot retrieve the call.

 If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

Picking up (Retrieving) a Held Call

Precondition: One or more calls have been parked. The telephone is idle.

Lift the handset.

Enter the code.

Enter the line number you noted earlier.

Step by Step

Making Calls to Stored Destinations

Redialing a Number


The last three external telephone numbers dialed are stored automatically.

You can redial them simply by pressing a key.

Lift the handset.

Press this key.



 
 If this feature is configured (contact System Support), accounts codes entered are also saved → page 27.

Using Station and System Speed-Dial Numbers

Precondition: You have stored station speed-dial numbers → page 33 or System Support has stored system speed-dial numbers.

Lift the handset.

Press the key.



or



Enter the code.

Enter a speed-dial number.

"*0" to *9" = station speed-dialing.

"000" to "999" = system speed-dialing (contact System Support).

Step by Step

Displaying and Assigning Call Charges

Dialing with Call Charge Assignment

You can assign external calls to certain projects.

Precondition: System Support has set up account codes for you.



Lift the handset.



Enter the code.



Enter the account code.

If applicable



Press this key (may be needed, depending on the configuration; contact System Support).



Enter the number of the external station.



You can also enter the account code during an external call.

Step by Step

If You Cannot Reach a Destination...

Using Callback

If a user is busy or is not answering, you can store an automatic callback. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback,

- When the other party is no longer busy
- When the user who did not answer has conducted another call.

Storing a Callback

Precondition: You have reached a busy line or noone answers.



Press the key. The LED lights up.

or



Press the key. LED flashes. Enter the code.

Answering a Callback

Precondition: A callback was saved. Your telephone rings. The Callback key lights up (if present).



Lift the handset. You hear a ring tone.

Deleting (All) Stored Callbacks



Lift the handset.



Enter the code.

Step by Step

Call Waiting (Camp-On)

It is important that you reach the called party, but the number is busy.



Lift the handset.

Enter the internal station number.

Wait (approx. 5 seconds) until the busy tone is followed by the ring tone.

The called party can then respond → page 12.



The called party can prevent automatic call waiting → page 12.

If this feature is configured (contact system support), you will hear the ring tone immediately.

Busy Override - Joining a Call in Progress

This function is only available if it has been configured by the service technician (contact System Support).

Precondition: You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Consultation



Press the key. LED flashes. Enter the code.

 
The called party and person to whom this party is talking hear an alerting tone every two seconds.

If the called party has a system telephone with display, the following appears on the screen: "Override: (station no. or name)"

You can now start talking.

Step by Step

Telephone Settings

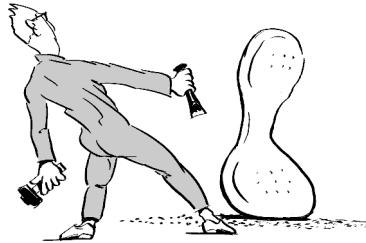

Adjusting the Ring Volume

+ or - Press one of these keys while the phone is idle.

1 Press the key.

+ or - To raise or lower the volume, keep pressing the keys until the desired volume is set.

+ - simultaneously Save.

Adjusting the Ring Tone

+ or - Press one of these keys while the phone is idle.

2 Press the key.

+ or - To adjust the ring tone, keep pressing the keys until the desired ring tone is set.

+ - simultaneously Save.

Adjusting the Receiving Volume During a Call

 
You are engaged in a call.

+ or - To raise or lower the volume, keep pressing the keys until the desired ring tone is set.

+ - simultaneously Save.

Step by Step

Locking the Telephone to Prevent Unauthorized Use

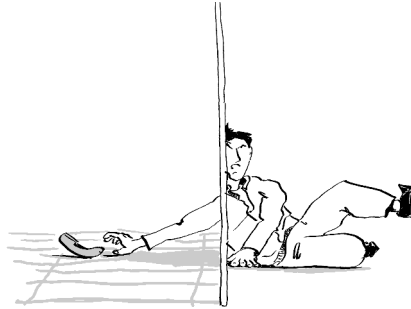

You can prevent unauthorized persons from using your telephone during your absence.

Precondition: You must have configured a personal identification number (PIN) for your telephone → page 32.

To lock and unlock the telephone:

Lift the handset.

* 6 6 or # 6 6



Enter the telephone lock PIN → page 32.



While the telephone is locked, a special dial tone sounds when you lift the handset. You can continue to dial internal numbers as usual.

An authorized party → page 43 can also lock and unlock your telephone.

Step by Step

Saving Your PIN

To prevent unauthorized persons from using your telephone → page 31 and to use another telephone like your own → page 39, you need to enter a personal identification number, which you can save yourself.



Lift the handset.



Enter the code.



Enter the current five-digit PIN.

If you have not yet assigned a PIN, use the PIN "00000" the first time you enter it.



Enter the new PIN.

Repeat the new PIN.



If you forget your PIN, contact System Support, who can reset your PIN to "00000."

An authorized party → page 43 can also lock and unlock your telephone.

Step by Step

Saving Station Numbers and Appointments

Storing Station Speed-Dial Numbers

You can store the ten numbers which you use the most and dial them using your own station speed-dial numbers: *0 through *9 → page 26.



Lift the handset.



Enter the code.



Enter the speed-dial number you wish to use (*0 to *9).



First enter the external code and then the external station number (wait approx. 5 seconds).

Saving Appointments

You can tell your telephone to give you a call when you want to be reminded of an appointment → page 14. To do this, you need to save the time you want the call to be made. The appointment can be set for any time within the next 24 hours.



Lift the handset.



Enter the code.



Enter a 4-digit time, such as 0905 for 9:05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m.).



Lift the handset.



Enter the code.

Deleting and checking a saved appointment

Step by Step

Testing the Telephone

Testing the Telephone Functions

You can test your telephone functions.

Precondition: Your telephone is idle.

Lift the handset.

Enter the code.

If everything is OK,

- all LEDs on the telephone start flashing, and
- the ringer signal sounds.




Step by Step

Call Forwarding

Using Variable Call Forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system).

 Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network)
→ page 54!



Lift the handset.



Enter the code.



Enter the line type you wish to use:

1 = all calls, 2 = external calls only, 3 = internal calls only




Enter the destination number (without the external code).



Lift the handset.



Enter the code.

 When call forwarding is active, a special dial tone sounds when you lift the handset.


If DID DTMF is active (contact System Support), you can also forward calls to this destination.

Destinations: fax = 870, DID = 871,
fax DID = 872.

Step by Step

Using Night Answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by System Support (standard night answer service) or by you (temporary night answer service).

 Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 55!

Activating this function:



Lift the handset.



Enter the code.



Enter the destination number (= temporary night answer service) within 5 seconds.

or



Enter the code or use the default (= standard night answer service).

Deactivating this function:



Enter the code.

Step by Step

Call Forwarding in the Carrier Network and Forwarding Multiple Subscriber Numbers (MSN) (Not for U.S.)

If this function has been configured (contact System Support), you can forward calls to your assigned multiple subscriber number (MSN) (DID number) directly within the carrier network.

For example, you can forward your phone line to your home phone after business hours.



Lift the handset.



Enter the code.



Enter the line type you wish to use:

1 = immediate, 2 = on no answer, 3 = on busy



Enter your DID number.



Enter the destination number (without the external code).

Deactivating call forwarding:



Lift the handset.



Enter the code.



Enter the activated call forwarding type.

1 = immediate, 2 = on no answer, 3 = on busy



Enter your DID number.

Step by Step

Using Other Functions

Sending a Message

You can send short text messages to users who have system telephones. Transmitted text messages are signaled in the same way as a callback request.



Lift the handset.

Enter the code.

Enter the recipient's internal station number.

Select the preprogrammed message (which can be changed by System Support). Enter the code. For example:

- | | |
|------------------------|------------------------|
| 0 = Please callback | 5 = Fax waiting |
| 1 = Someone is waiting | 6 = Dictation please |
| 2 = Appointment | 7 = Please come see me |
| 3 = Urgent call | 8 = Please make copies |
| 4 = Do not disturb | 9 = Ready to depart |

Deleting Sent Messages

 


Lift the handset.

Enter the code.


Answering Messages

If there are messages waiting for you, you will hear a special dial tone or an announcement when you lift the handset.



Lift the handset.

 Enter the code.



Press the illuminated key.

This connects you to the sender of the message or the mailbox system.

Step by Step

Using Another Telephone Like Your Own

Other people can temporarily use your telephone for outgoing calls as though it were their own.



Lift the handset.



Enter the code.



Enter the other user's station number.



Enter the other user's telephone lock PIN.



Dial the external number.

This state is canceled at the end of the call.

Moving Your Telephone (Relocate Procedure)

If this function has been configured (contact System Support), you can log your telephone off its current connection and log back onto another one.

This does not erase any settings on your telephone (such as your station number or programmed keys).

Precondition: No other replacement procedure has been initiated.

Logging the telephone off its current connection:



Lift the handset.



Enter the code.

Pull the telephone plug from the wall outlet.

Logging the telephone on at the relocation destination:

Insert the telephone plug into the required wall outlet.



Lift the handset.



Enter the code.

Step by Step

Resetting Services and Functions (System-Wide Cancellation for a Telephone)

There is a general reset procedure for activated functions. The following functions are canceled, if they were activated:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunting group off
- Suppress call ID
- Waiting tone off
- DND on
- Ringer cutoff on
- Messages received:
- View callbacks



Lift the handset.



Enter the code.

Step by Step

Silent Monitor

If this function has been configured (contact System Support), you can join a call already in progress at an internal station and listen in unnoticed.



Lift the handset.



Enter the code.



Enter the internal station number.

Monitoring a Room

A telephone can be used to monitor a room. The function must be activated on the telephone that you want to monitor.

Calling this telephone lets you hear what is going on in the room.

Activating the telephone to be monitored:



Lift the handset and direct it towards the noise source.



Enter the code.

Deactivating the telephone to be monitored:



Replace the handset.

Monitoring the room:



Lift the handset.



Enter the internal number of the telephone in the room you wish to monitor.

Step by Step

Activating Functions for Another Telephone

If this function has been configured (contact System Support), you can turn the following functions on and off for other telephones. This feature is also known as associated service.

- Do not disturb, code: *97/#97 → page 15
- Call forwarding, code *11, *12, *13/#1 → page 35
- Lock and unlock all phones, code: *66/#66 → page 31
- Group ringing, code: *81/#81 → page 51
- Group call, code: *85/#85 → page 50
- Reset services and functions, code #0 → page 40
- Control relay, code: *90/#90 → page 46
- Night service, code *44/#44 → page 36
- Timed reminders, code *65 → page 33



Lift the handset.



Enter the code.



Enter the internal number of the telephone for which you want to activate the function.



Enter the code – e.g. *97 for DND on – and procedure (if relevant).

Step by Step

Locking Another Telephone to Prevent Unauthorized Use

If this function has been configured (contact System Support), you can lock other telephones to prevent unauthorized use, and later unlock them again.

You can use this function to unlock the telephone for users who have locked their telephones and then forgotten their PINs.

Lift the handset.



Enter the code.



Enter the internal number of the telephone that you want to lock or unlock.



Enter the code for "Changeover on".



Enter the code for "Changeover off".

Using System Functions from the Outside (DISA: Direct Inward System Access)

If this function has been configured (contact System Support), you can set up external outgoing calls from outside the system, just like an internal user. You can also activate and deactivate the following functions in your system:

- Reset services and functions, code: #0 → page 40
- Call forwarding, code: *1/#1 → page 35
- Lock and unlock all phones, code: *66/#66 → page 31
- Save PIN, code: *93 → page 32
- Send a message, code: *68/#68 → page 38
- Group ringing, code: *81/#81 → page 51
- Group call, code: *85/#85 → page 50
- Suppress caller ID, code: *86/#86 → page 19
- Open door, code: *61 → page 16
- Door opener on/off, code: *89/#89 → page 17
- Control relay, code *90/#90 → page 46

Step by Step

- Do not disturb, code: *97/#97 → page 15
- Speed-dialing, code: *7 → page 26
- Associated service, code: *83 → page 42

Precondition: You have a telephone that uses tone dialing (DTMF dialing) or you can switch your telephone to tone dialing. The telephone is not connected to the system.



Set up a call to the system. Enter the station number (contact System Support).



Wait for a continuous tone (if necessary switch the telephone to tone dialing), then enter the internal number that has been assigned to you and the associated PIN.



Enter the code (necessary only if programmed in the system).



Wait for a dial tone and then enter the code, such as *97 for Do not disturb on. Make other inputs as necessary; (refer to the operating instructions for pulse and DTMF telephones).

or



Dial the external number.



You can only execute one function at a time, or set up only one outgoing connection. The connection is immediately released after successful activation of a function. In the case of an external-external call, the connection is released as soon as either of the parties ends the call.

Step by Step

Controlling Connected Computers or Other Programs and Telephone Data Service (For HiPath 3500/3550/3700/3750 only)

If this function has been configured (contact System Support), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

Precondition: You have set up a connection.

Consultation



Press the key. LED flashes. Enter the code.

The connected computer now prompts you to enter the data, which you can do in one of two ways. Contact System Support to find out which option is programmed in your system:

- Input in en-bloc mode

Enter data.

Press this key at the end of the entry.



or

- Input in online mode:
The connected computer processes your entries directly.

Enter the code.

Enter data.




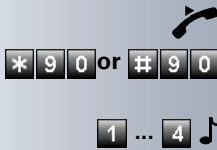 
Step by Step

Controlling Relays

If this feature is configured (contact System Support), you can turn up to four relays on and off to control different facilities (such as a door opener).

Depending on how they are programmed, you can switch the relays on and off or switch them on and have them switched off automatically after a timeout.

 Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 57!



Lift the handset.

Enter the code for "on" or "off".

Enter the relay.

Radio Paging (Not for U.S.)

If paging equipment is connected to your system (contact System Support), you can contact people via their pocket receivers.

The pocket receiver indicates to the person you are looking for that someone is trying to get in touch. The person you page can then go to the nearest telephone and call you.

The operating procedures differ according to the type of radio paging equipment connected (simple or enhanced paging equipment).

Simple Paging Equipment

Paging:

To be paged, you must have activated a call ringing group → page 51, call forwarding → page 35, or call redirection (service technician) to the internal station number of your paging equipment.

A call request is then signaled automatically.

Step by Step**Answering the page from the nearest telephone:**

Lift the handset.

Enter the code.

Enter your own station number.

Enhanced Paging Equipment (Hipath 3700/3750 Only)**Paging:**

Lift the handset.

Enter the code.

Enter the number of the party you want to page.

**Answering the page from the nearest telephone:**

Lift the handset.

Enter the code.

Enter your own station number.

Step by Step

Team and Executive/Secretary Functions With Assigned Trunk Lines

If this function has been configured (contact System Support), you belong to a team of users for whom special trunk lines exist. You can then conduct your calls as usual via the trunk assigned to you. In addition, you can also activate call forwarding or a ring transfer for the lines of your group.

Forwarding Calls on Lines

You can immediately forward internal or external calls on lines of your group to different internal or external telephones (destinations); even external destinations are possible in certain system configurations. Activating call forwarding for one line activates the function for all members in your group.



Lift the handset.



Enter the code.



Enter the desired line number.



Enter the line type you wish to use:

1 = all calls, 2 = external calls only, 3 = internal calls only



Enter the destination number (without the external code).



Lift the handset.



Enter the code.



Enter the desired line number.

Step by Step



If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.

Transferring Calls Directly to the Executive (Only in an Executive/Secretary Group)

Normally, audible signaling of all calls for the executive is heard only in the secretary's office.

You can activate audible signaling so that calls are only signaled on the executive telephone and on a second telephone assigned to it.

Activating this function:



Lift the handset.

* 5 0 2

Enter the code.



Enter the desired line number.

Deactivating this function:



Lift the handset.

5 0 2

Enter the code.



Enter the desired line number.

Step by Step

Using Other Team Functions

Turning Group Call On and Off

If this function has been configured (contact System Support), you belong to one or more groups of users who can each be reached under a hunt group or group call number.

Incoming calls are signaled on all group member telephones in the order in which they are received (hunt group) or simultaneously (= group call) until one member of the group accepts the call.

You can also belong to a team (including executive/secretary ones) to which multiple lines have been assigned. → page 48.

Each member of the group remains available under his or her own station number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group (including an executive/secretary team).



Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 53!

You belong to a hunt group or a group call:



Lift the handset.

8 5 or * 8 5 

Enter the code for "leave" or "join".

You belong to multiple groups or to one group with lines (including executive/secretary teams):



Lift the handset.

8 5 or * 8 5

Enter the code for "leave" or "join".


or

Enter the code for "Leave all groups".

* 

Enter the code for "Join all groups".

Step by Step



Enter a group/trunk number to directly "leave or join".



If you deactivate the audible tone for another group or trunk, or deactivate it for all groups and trunks to which you belong, a special dial tone sounds when you lift the handset.

Accepting a Call for Another Member of Your Team

You can accept calls for other telephones in your team from your telephone even while engaged in another call. To do this, contact System Support to find out if a pickup group has been configured.

Precondition: You telephone rings briefly.

Lift the handset.

Enter the code.



Activating and Deactivating a Ringing Group

You can have calls for your telephone signaled audibly at up to five other phones. The person who answers first receives the call.



Special features must be taken into consideration if your telephone operates with HiPath AllServe (system networking via PC network) → page 56!

Saving telephones for the ringing group:

Lift the handset.

Enter the code.

Enter the internal station number.



Removing all telephones in call ringing group:

Lift the handset.

Enter the code.



Step by Step

Uniform Call Distribution (UCD)

If this function has been configured (contact System Support), you belong to a group of users (agents) to whom calls are distributed.

An incoming call is always assigned to the agent who has had the longest break without a call.

Logging on and off at the beginning and end of your shift:

Lift the handset.

* 4 0 1 or # 4 0 1

Enter the code for "Log on" or "Log off".



To log on, enter your identification number ("Agent:"). Contact System Support to find out what it is.

Logging on and off during your shift:

Lift the handset.

4 0 2 or * 4 0 2

Enter the code for "Not available" or "Available".

Requesting and activating a work time:

If you want to follow-up on the last call you answered without being disturbed, you can request and activate a work time. This removes your telephone from the call distribution cycle for a programmable period of time until you log back on.

You have or had an UCD connection.

* 4 0 3 or # 4 0 3

Enter the code for "on" or "off".

Turning the night service on and off for UCD:

Lift the handset.

* 4 0 4 or # 4 0 4

Enter the code for "on" or "off".

Step by Step

Special Functions in the LAN (PC Network)

If your telephone is operating in a HiPath AllServe environment, multiple HiPath 3000 systems are interconnected via a LAN (**L**ocal **A**rea **N**etwork, e.g. proprietary PC network). Your telephone calls are conducted via the LAN (PC network).

If this is the case, you must take certain special features into consideration when performing various functions. These are described below.

Leaving a Hunt Group/Group Call

Precondition: you belong to the hunt group/group call
→ page 50 of another HiPath 3000:



Lift the handset.



Enter the code.



Enter the (DISA) call number of the other HiPath 3000.



Enter.



Enter the (DISA) call number of your telephone.



Enter.



Enter the code for "leave" or "join".

You belong to multiple groups of another HiPath 3000:



Enter the group number for "Join/Leave, directed".

Step by Step

Transferring Call Forwarding

You can activate/deactivate call forwarding → page 35 for your telephones from other HiPath AllServe telephones.



Lift the handset.



Enter the code.



Enter the (DISA) call number of the HiPath 3000 to which your telephone is connected.



Enter.



Enter the (DISA) call number of your telephone.



Enter.

Activating this function:



Enter the code.



Enter the line type you wish to use:
1 = all calls, 2 = external calls only, 3 = internal calls only



Enter the destination number (without external code).

Deactivating this function:



Enter the code.

Step by Step

Using Night Answer

If authorized (contact System Support), you can define telephones in other HiPath 3000 communications platforms as the night answer → page 36.



Lift the handset.



Enter the code.



Enter the (DISA) call number of the HiPath 3000 to which the night answer telephone is connected.



Enter.



Enter the (DISA) call number of the telephone from which you wish to activate/deactivate the night answer service.



Enter.

Activating this function:



Enter the code.



Enter the destination number (= temporary night answer service) within 5 seconds.

Deactivating this function:



Enter the code.

Step by Step

Activating and Deactivating a Ringing Group

You can have calls for your telephone signaled audibly at external telephones or at telephones in other HiPath 3000 communications platforms → page 51.

Saving the telephones for the ringing group:



Lift the handset.



Enter the code.



Enter the call number.



Enter.

Removing all telephones in call ringing group:



Lift the handset.



Enter the code.

Step by Step

Controlling Relays

If this feature is configured (contact System Support), you can also control relays → page 46 in other HiPath 3000 communications platforms.



Lift the handset.



Enter the code.



Enter the (DISA) call number of the HiPath 3000 in which the relay is to be controlled.



 
Enter.



Enter the (DISA) call number of the telephone from which you wish to control the relay.



Enter.



Enter the code for "on" or "off".



Enter the relay.

Step by Step

Opening the Door

If this feature is configured (contact System Support), you can also activate the door opener → page 16 in other HiPath 3000 communications platforms.



Lift the handset.



Enter the code.



Enter the (DISA) call number of the HiPath 3000 in which the door is to be opened.



Enter.



Enter the (DISA) call number of the telephone from which you wish to activate the door opener.



Enter.



Enter the code.



Enter the call number of the entrance telephone.

Documentation

Ordering Operating Instructions (Not for U.S.)

Additional copies of these operating instructions can be ordered from the Siemens sales department:

- Printed copy in an accessory pack, order number A31003-M1550-B830-4-7619 (also available in other languages),
- On CD in HTML and PDF format, order number P31003-H1012-C115-1-6Z19 (7 languages included).



Contact System Support for information and ordering instructions.

Operating Instructions in the Internet

You can download these operating instructions as a file from the Internet:
<http://www.hipath.com>

The operating instructions are available in PDF format. To read them, you need the Adobe Acrobat Reader, which is available free of charge.

To download files from the Internet you need a computer with Internet access and a Web browser such as Netscape Communicator or Microsoft Internet Explorer.

Accessories



You will find details about the individual products in the optiPoint 500 telephone data sheets.

Fixing Problems



Telephone Maintenance

- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use cleaners containing alcohol, cleaners that corrode plastic, or abrasive powders.

Troubleshooting

Pressed key does not respond:

Check whether the key is stuck.

Telephone does not ring:

Check whether the "do not disturb" function was activated on your telephone. On lifting the handset, you will hear a special dial tone. If so, deactivate it → page 15.

You cannot dial an external number:

Check whether your telephone is locked. On lifting the handset, you will hear a special dial tone. If so, unlock the telephone → page 31.

To correct any other problem:

First contact System Support. If System Support is unable to correct the problem, contact Customer Service.

Index

A

| | |
|--------------------------------------|----|
| accessories | 59 |
| account code | 27 |
| adapters | 59 |
| agents | 52 |
| announcement | 19 |
| answering a timed reminder | 14 |
| appointment | 33 |
| assigning a DID number | 21 |
| assigning available keys | 33 |
| assigning programmable keys | 33 |
| associated dialing/dialing aid | 21 |
| automatic connection setup | 20 |

C

| | |
|-----------------------------------|--------|
| call | |
| accepting, group | 51 |
| answering | 11 |
| entrance telephone | 16 |
| forwarding | 35 |
| forwarding in a team | 48 |
| forwarding MSN in CO | 37 |
| parking | 25 |
| pickup, directed | 13 |
| rejecting | 13 |
| retrieving from park | 25 |
| retrieving held | 25 |
| transfer after announcement | 24 |
| call charge assignment | 27 |
| call forwarding | 35 |
| MSN in CO | 37 |
| call signal | 11 |
| call transfer | 24 |
| call volume | 11, 30 |
| call waiting | |
| accepting | 12 |
| allowing | 12 |
| preventing | 12 |
| call waiting (camp-on) | |
| tone off | 13 |
| call waiting (camp-on) | 29 |
| call waiting on/off | 13 |
| call waiting tone on/off | 13 |
| caller ID | |

| | |
|-------------------------------------|----|
| restoring display of | |
| suppressing display of caller ID 19 | |
| caller ID suppression | 19 |
| calling a second party | 22 |
| calls | |
| distributing | 52 |
| calls in queue | 52 |
| CE mark | 4 |
| cleaning the telephone | 60 |
| conference | 22 |
| connection setup, automatic | 20 |
| consultation hold key | 22 |

D

| | |
|--|----|
| dialing | |
| internal/external calls | 18 |
| dialing internal calls | 18 |
| dialing numbers | |
| on-hook dialing | 18 |
| using redial | 26 |
| using speed-dialing | 26 |
| direct inward system access (DISA) | 43 |
| DISA | 43 |
| distributing calls | 52 |
| do not disturb | 15 |
| door opener | 17 |

E

| | |
|-------------------------------------|----|
| enhanced paging equipment | 47 |
| entrance telephone | 16 |
| executive/secretary functions | 48 |
| explanation of symbols | 2 |
| external code | 18 |

F

| | |
|--|----|
| forwarding | 35 |
| multiple subscriber number (MSN) | 37 |
| forwarding MSN in CO | 37 |
| forwarding multiple subscriber number (MSN) | 37 |
| functions | |
| activating/deactivating for another telephone associated service | 42 |
| resetting | 40 |

- G**
group call 50
- H**
handsfree answerback 14
HiPath AllServe
 actuators 57
 group call 53
 hunt group 53
 night answer 55
 opening the door 58
 relays 57
 ringing group 56
 transferring call forwarding 54
hotline 20
HTML format 59
hunt group 50
- I**
IP telephony 53
- K**
keys
 assigning 33
- L**
LAN telephony 53
locking
 all phones 43
locking all phones 43
locking/unlocking the telephone 31
- M**
mailbox 14
making calls
 to stored destinations 26
 with the dialing aid 21
making external calls 18
making trunk calls 18
malfunctions 60
message
 answering 38
 deleting/displaying 38
 receiving 38
 sending 38
monitoring
 silent 41
moving the telephone 39
- N**
night answer 36
notes 4
- O**
open door
 with a code 16
open listening 11
operating instructions
 HTML format 59
 ordering 59
 PDF format 59
operating principle 5
operating steps 2
override 29, 41
- P**
parking a call 25
PDF format 59
personal identification number 32
phone change 39
pickup (call) 13, 51
PIN 32
 for a telephone 31
preventing and allowing automatic camp-
on 12
programming available keys 33
programming keys 33
programming your telephone 30
project calls 27
- R**
radio paging equipment PSE 46
recall 24
receiving volume 11, 30
redialing a number 26
relays 46
release 11, 18

| | | | |
|--------------------------------------|--------|--|----|
| relocate | 39 | telephone maintenance | 60 |
| relocate procedure | 39 | telephone test | 34 |
| reserving a trunk | 20 | temporary phone using a | |
| resetting functions | 40 | temporary phone | 39 |
| resetting services | 40 | testing the telephone | 34 |
| ring tone | 30 | testing the telephone functions | 34 |
| ring transfer | | text message | |
| in an executive/secretary team | 49 | answering | 38 |
| ring volume | 30 | deleting/displaying | 38 |
| ringing group | 51 | receiving | 38 |
| room monitor | 41 | sending | 38 |
| | | three-party conference | 22 |
| S | | time-dependent hotline | 20 |
| saving a PIN | 32 | toggle | 22 |
| secretary functions | 48 | tone dialing | 19 |
| setting your telephone | 30 | tone dialing (DTMF dialing) | 19 |
| silent monitor | 41 | trace call | 15 |
| simple paging equipment | 46 | transfer (call) | |
| speaker call | 19 | after announcement | 24 |
| special dial tone | 14 | transfer call | 24 |
| speed-dialing | | Trennen | 13 |
| dialing numbers | 26 | trunk flash | 21 |
| saving station speed-dialing | 33 | trunk keys in a team | 48 |
| system | 26 | trunk, reserving | 20 |
| station number | | | |
| assigning | 21 | U | |
| station speed-dialing | 26, 33 | UCD | 52 |
| suffix-dialing | 19 | using functions from the outside | 43 |
| switches | 46 | | |
| system speed-dialing | 26 | V | |
| system-wide cancellation | 40 | variable call forwarding | 35 |
| | | | |
| T | | W | |
| team with trunk keys | 48 | work time | 52 |
| telephone | | | |
| cleaning | 60 | | |
| locking | 31 | | |
| locking another | 43 | | |
| locking/unlocking | 31 | | |
| locking/unlocking all phones | 43 | | |
| maintaining | 60 | | |
| operating | 5 | | |
| settings | 30 | | |
| testing | 34 | | |
| using another like your own | 39 | | |
| telephone data service | 45 | | |

Alphabetical Overview of Functions and Codes

The table below lists all available functions. If these functions have been configured (contact System Support), they can be called by entering a code or pressing a function key.

| Functions | Operating Steps |
|---|--|
| Accept a waiting call (camp-on) | / Consult <input type="text"/> <input type="text"/> * 5 5 |
| Terminate second call, 1. Continue the call | Consult <input type="text"/> / Consult <input type="text"/> 2x |
| Prevent / allow call waiting (automatic camp-on) | # 4 9 0 / * 4 9 0 |
| Call waiting tone on/off | * 8 7 / # 8 7 |
| Accept call, directed/group | * 5 9 <input type="text"/> Int. / * 5 7 |
| Adjust ring volume/tone | + / - <input type="text"/> 1 / 2 + - simultaneously |
| Answer call | |
| Assign station number (not for U.S.) | * 4 1 <input type="text"/> MSN <input type="text"/> Ext. |
| Associated dialing | * 6 7 <input type="text"/> Int. <input type="text"/> Stn No. |
| Associated service | * 8 3 <input type="text"/> Int. <input type="text"/> |
| Call charge assignment / account code | * 6 0 <input type="text"/> Code # if appl. <input type="text"/> Ext. |
| Call forwarding on | * 1 <input type="text"/> 1 / 2 / 3 <input type="text"/> Ext. |
| Call forwarding off | # 1 |
| Forward Line: On | * 5 0 1 <input type="text"/> Trk No <input type="text"/> 1 / 2 / 3 Ext. |
| Forward Line: Off | # 5 0 1 <input type="text"/> Trk No. |
| Call forwarding in carrier network on | * 6 4 <input type="text"/> 1 / 2 / 3 <input type="text"/> MSN <input type="text"/> Ext. |
| Call forwarding in carrier network off | # 6 4 <input type="text"/> 1 / 2 / 3 <input type="text"/> MSN |
| Call waiting (camp-on) | <input type="text"/> Int. Stn busy; wait 5 seconds |
| Change call volume | + / - + - simultaneously |
| Changeover on/off (lock/unlock) | * 6 6 / # 6 6 <input type="text"/> Code |
| Lock / unlock all phones | * 9 4 3 <input type="text"/> Int. * / # |
| Consult | Consult <input type="text"/> <input type="text"/> Stn No. |
| Quit consultation, 1. Continue the call | Consult <input type="text"/> / Consult <input type="text"/> 2x |
| Toggle/Start three-party conference | Consult <input type="text"/> * 2 / * 3 |
| Connect parties | |
| Control relay on/off | * 9 0 / # 9 0 <input type="text"/> 1 ... 4 |

| Functions | Operating Steps |
|--|---|
| Conversation (entrance telephone) | / after 30 seconds Int. |
| Open door | Consult <input type="text"/> * 6 1 Int. |
| Door release on | * 8 9 Int. + Code 1 / 2 |
| Door release off | # 8 9 Int. |
| DND on/off | * 9 7 / # 9 7 |
| DTMF dialing / Tone dialing | Consult <input type="text"/> * 5 3 |
| Ending a call | / <input type="text"/> Release <input type="text"/> |
| Group call, leave | # 8 5 / 5 # / 5 Group |
| Group call, join | * 8 5 / 5 * / 5 Group |
| Hotline | |
| Making calls | Stn No. / Stn No. |
| Monitoring (only U.S.) | * 9 4 4 Int. |
| Mute off/on | <input type="text"/> Mute on/off <input type="text"/> / <input type="text"/> Mute on/off <input type="text"/> |
| Night answer on | * 4 4 Int. / * |
| Night answer off | # 4 4 |
| Override | Stn busy <input type="text"/> Consult <input type="text"/> * 6 2 |
| Paging another person (not for U.S.) | * 4 5 Int. |
| Answer page (simple/enhanced paging equipment) | * 5 9 / # 4 5 Int. |
| Park a call | Consult <input type="text"/> * 5 6 0 ... 9 |
| Retrieve parked call | # 5 6 0 ... 9 |
| Phone test | * 9 4 0 |
| Picking up (retrieving) a held call | * 6 3 Line No. |
| Redial | <input type="text"/> Redial <input type="text"/> |
| Reject call | <input type="text"/> Release <input type="text"/> |
| Relocate station: log off/log on | * 9 4 1 9 / # 9 4 1 9 |
| Reserve trunk | Busy (external); wait 5 seconds |
| When the reserved trunk is free | Ext. |
| Reset services | # 0 |
| Ring transfer on / off | * / # 5 0 2 Line No. |
| Ringling group on/off | * 8 1 Int. / # 8 1 |

| Functions | Operating Steps |
|--|---|
| Room monitor on/off | * 8 8 / |
| Monitoring a room | Int. |
| Save timed reminder | * 4 6 (Time, e.g. 0905) |
| Delete timed reminder / Accept timed call | # 4 6 / |
| Saving a PIN | * 9 3 Old code 2 X new code |
| Send message | * 6 8 Int. 0 ... 9 |
| Delete / accept (sent) message | # 6 8 1 / # 6 8 3 |
| Speaker call / HF answerback | * 8 0 Int. / |
| Start conference | Stn No. <input type="text" value="Consult"/> Stn No. <input type="text" value="Consult"/> * 3 |
| The other party does not respond 1. Continue the call | <input type="text" value="Consult"/> / <input type="text" value="Consult"/> 2x |
| Add a party to the conference (max. five) | <input type="text" value="Consult"/> Stn No. <input type="text" value="Consult"/> * 3 etc. |
| Leave conference / remove party | / <input type="text" value="Consult"/> # 3 |
| Remove ISDN central office party from the conference (only for U.S.) | <input type="text" value="Consult"/> * 4 9 1 |
| Store a callback | <input type="text" value="Callback"/> |
| Delete/accept callback | # 5 8 / |
| Suppress caller ID on/off | * 8 6 / # 8 6 |
| Telephone data service | <input type="text" value="Consult"/> * 4 2 |
| Trace call (not for U.S.) | <input type="text" value="Consult"/> * 8 4 |
| Transferring a call ...after announcement to group | <input type="text" value="Consult"/> Stn No. <input type="text" value="Consult"/> * 8 0 Group |
| Trunk flash | <input type="text" value="Consult"/> * 5 1 |
| UCD | |
| Log on/off at beginning/end of shift | * 4 0 1 Code / # 4 0 1 |
| Log off / log on work | # 4 0 2 / * 4 0 2 |
| Work time on/off | / * 4 0 3 / # 4 0 3 |
| Night answer on/off | * 4 0 4 / # 4 0 4 |
| Use speed-dialing | <input type="text" value="Speed-dialing"/> / * 7 |
| Speed-dialing: store station | * 0... * 9 / 000...999 * 9 2 * 0... * 9 Ext. |

Schritt für Schritt

Functions

Using another phone temporarily

Using mailboxes

Operating Steps

 * 5 0 8  Int.  Code 

  # 6 8 3 / 

FCC and Industry Canada Compliance

This section describes the requirements for compliance with Federal Communications Commission (FCC) Rules and Industry Canada CS-03 standard.

FCC Certification and Requirements

The following paragraphs describe requirements and information based on FCC rules.

Service

If you experience problem with the Siemens optiPoint 500 telephone, contact Siemens customer support at 1-800-835-7656 for information on service and repairs. The telephone company can ask you to disconnect the equipment from the network until the problem is corrected or until you are sure that the equipment is not malfunctioning.

FCC Rules, Part 15

The Siemens optiPoint 500 telephone has been tested and complied with the limits for a class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, can cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference in the user's expense.

FCC Rules, Part 68

1. FCC Part 68 Certification

The Siemens optiPoint 500 telephone is certified with FCC under Part 68 as a component device for connection behind FCC Part 68 certified Siemens PBX systems. In order for the FCC certification of the Siemens optiPoint 500 telephone to be retained, all other products used in conjunction with the Siemens optiPoint 500 telephone must also be FCC Part 68 certified for use with the front-end terminal equipment. If any of these components are not certified, Siemens is required to obtain FCC Part 68 certification of the assembled equipment prior to connection to the telephone network. Part 68 certification requires Siemens to maintain this approval and as such are responsible for the following:

- Any component added to the Siemens optiPoint 500 telephone, whether it bears component certification or not, will require a Part 68 compliance evaluation. Siemens may need to test and make a modification filing to the FCC before that new component can be used;
- Any modification/update made to the Siemens optiPoint 500 telephone will require a Part 68 compliance evaluation. Siemens may need to test and make a modification filing to the FCC before that modified component can be used;
- Siemens optiPoint 500 telephone complies with and will continue to comply with all the applicable rules and regulations in Subpart D of the FCC Part 68 rules during the life-time of the product.

If at any time the ownership of Siemens optiPoint 500 telephone is transferred to someone else (whether independently or as part of a system), please supply this manual to the new owner.

2. REN

The ringer equivalence number (REN) is used to determine the quality of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed five (5.0). At the base of the telephone is a label contains, among other information, the REN and the FCC certification number. If requested, this information must be given to the telephone company. To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

Note: REN is associated with the analog telephones. It is not applicable to Siemens optiPoint 500 telephone. If requested, please supply the FCC Certification numbers of the front-end host terminal equipment that have a direct Public Switched Telephone Network connection (i.e. have a REN stated on the label) and the highest REN.

3. Facility Interface Information

Siemens optiPoint 500 telephone connects to the public switched telephone network through FCC Part 68 certified front-end host PBX equipment which specifies the type of network jacks to be used.

4. Disruption of the Network

If the Siemens optiPoint 500 telephone disrupts the telephone network, the telephone company can discontinue your service temporarily. If possible, the telephone company will notify you in advance. If advance notice is not practical, they will notify you as soon as possible. You are also informed of your right to file a complaint with the FCC.

5. Telephone Company Facility Changes

The telephone company can make changes in its facilities, equipment, operations, or procedures that can affect the operation of your equipment. If they do, you should be notified in advance so you have an opportunity to maintain uninterrupted telephone service.

6. Hearing-Aid Compatibility

Telephones for emergency use and telephones installed in common areas such as lobbies, hospital rooms, elevators, and hotel rooms must have handsets that are compatible with magnetically coupled hearing aids. Persons who are not in common areas must also be provided with hearing-aid compatible handsets, if needed.

The Siemens optiPoint 500 telephone complies with the FCC Rules, Part 68, Section 68.316 Hearing Aid Compatibility and 68.317 volume control requirements.

7. Programmed Dialer Features

When you program emergency numbers or make test calls to emergency numbers using Siemens products with programmed dialer features, stay on the line and briefly explain to the dispatcher the reason for the call before hanging up. Perform these activities in off-peak hours, such as early morning or late evening.

Equipment Attachment Limitations

The following are notices required by Industry Canada Terminal Attachment Program Certification Procedure CP-01, Part I, Section 14.

Ringer Equivalence Number (REN)

The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5. The REN is associated with the analog loop-start and ground-start telephones. It is not applicable to Siemens optiPoint 500 telephones.

Equipment Attachment Limitations

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirement documents. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.



DANGER

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

WARNING!

Hackers who unlawfully gain access to customer telecommunication systems are criminals. Currently, we do not know of any telecommunications system that is immune to this type of criminal activity. Siemens Information and Communication Networks, Inc. will not accept liability for any damages, including long distance charges, which result from unauthorized use. Although Siemens has designed security features into its products, it is your sole responsibility to use the security features and to establish security practices within your company, including training, security awareness, and call auditing.

Siemens sales and service personnel, as well as Siemens business partners, are available to work with you to help you prevent this type of unauthorized use of your telecommunications system.

February 2002

Job No. 5167

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, mechanical, electronic photocopying, recording, or otherwise, without prior written permission of Siemens Information and Communication Networks, Inc. The software described in this publication is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

Request Siemens publications from your Siemens representative or the Siemens branch serving you. Publications are *not* stocked at the address below.

Siemens Information and Communication Networks, Inc.
1700 Technology Drive
San Jose, CA 95110
(408) 492-2000
1 (800) 765-6123
Fax: (408) 492-3430

HiPath is a trademark of Siemens AG, and Siemens, Hicom, and optiPoint are registered trademarks of Siemens AG.

All other trademarks and company names are the property of their respective owners.

Copyright Siemens Information and Communication Networks, Inc. 2002. All rights reserved.